



NICHEBOX

INSTALLATION

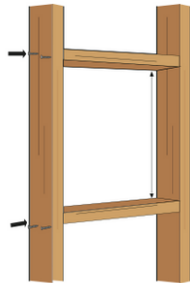

STEP 1

Determine the location of the niches between two vertical studs and mark the 2x4s accordingly with the help of a level. Add horizontal blocking pieces to support top and bottom of the niche.

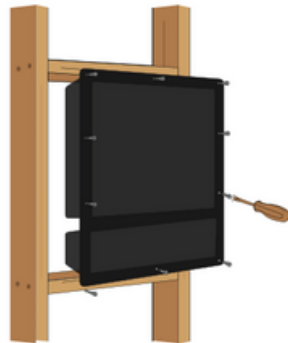


STEP 2

Fix the niche to the opening using M5x25 pan head tapping screws. Do not overtighten!



STEP 3

Cut an opening in the backer board to exact size of the niche and install it around the niche. Apply 100% waterproofing silicone to cover each screw head and the gap between the niche flange & shower board.

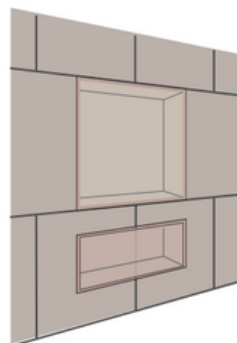

STEP 4

Apply polymer modified thin-set mortar to the niche and back butter tile ensure full contact.

NOTE: Have the top tile/stone cut to 45° at the ends to keep the tile/stone in place and to prevent drop off.